


Get your **EZStepper** going!

Starter Kit Instructions StepperStick™ Controller + Driver

1. Download and install EZ Commander™ software from the AllMotion® website: www.allmotion.com.
2. Download and install the appropriate USB drivers from the AllMotion website Support page.
3. In EZ Commander™, click "Settings", then "Rescan Ports". Note available com ports. Click "OK."
4. Plug StepperStick into the computer.
5. In EZ Commander, click "Settings", then "Rescan ports." A new com port should appear.
6. Select the new com port. Click "OK."
7. Unplug StepperStick.
8. Connect stepper motor as shown while StepperStick is unplugged.
9. Plug StepperStick back into the computer.
10. In EZ Commander, issue the command `"/1A1000A0R"`; the motor should spin back and forth.
11. Download full documentation from the AllMotion website.

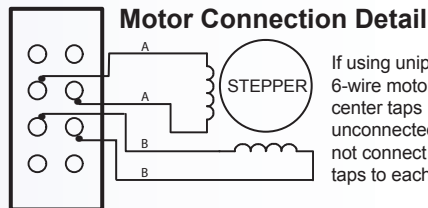

If using unipolar 6-wire motor, leave center taps unconnected. Do not connect center taps to each other.

CAUTION!

Do not connect or disconnect motor with StepperStick plugged in. Unplugging of or intermittent connection to an inductive load creates a high voltage/spark, which will damage the driver.

ALLMOTION

www.allmotion.com 30097 Ahern Avenue, Union City, CA 94587

Telephone 408.460.1345 Email support@allmotion.com